



# WIDE-OUT™ Snowplow

52225, 52810

## Installation Instructions

### ⚠ CAUTION

Read this document before installing the snowplow.

### ⚠ CAUTION

See your WESTERN® outlet/website for specific vehicle application recommendations before installation. The Quick Match selection system has specific vehicle and snowplow requirements.



# SAFETY

## SAFETY DEFINITIONS

### ⚠ WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious personal injury.

### ⚠ CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.


**NOTE:** Indicates a situation or action that can lead to damage to your snowplow and vehicle or other property. Other useful information can also be described.

## WARNING/CAUTION AND INSTRUCTION LABELS

Become familiar with and inform users about the warning/caution and instruction labels on the back of the blade.

**NOTE:** If labels are missing or cannot be read, see your sales outlet.


### Warning and Caution Label

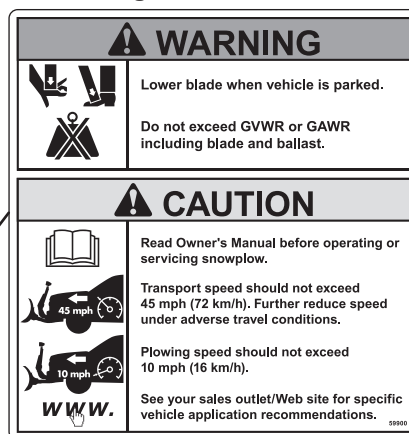


### Multiple Pinch Points Label



WIDE-OUT™ Blades Only  
(both sides)

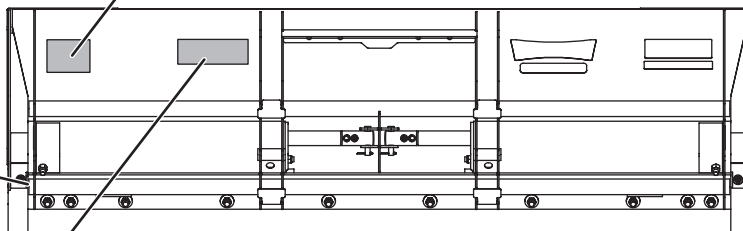

### Instruction Label

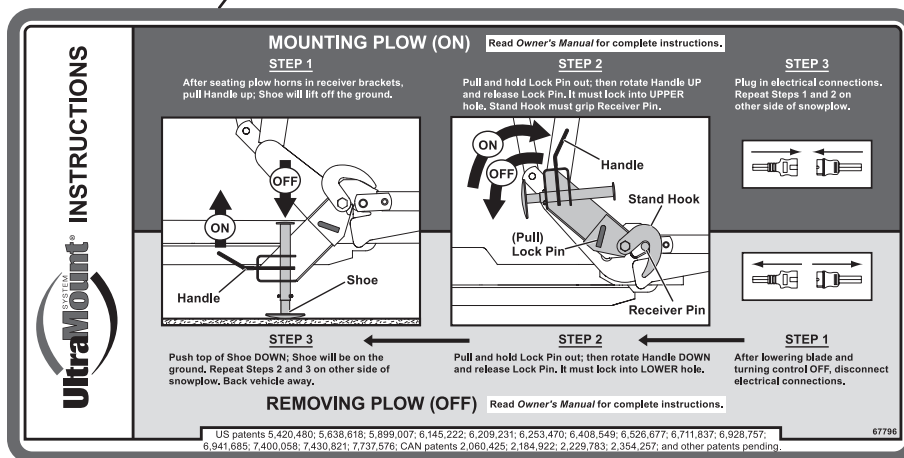

# SAFETY

## SAFETY PRECAUTIONS

Improper installation and operation could cause personal injury and/or equipment and property damage. Read and understand labels and the Owner's Manual before installing, operating or making adjustments.

### WARNING

Lower blade when vehicle is parked. Temperature changes could change hydraulic pressure, causing the blade to drop unexpectedly or damaging hydraulic components. Failure to do this could result in serious personal injury.

### WARNING

The driver shall keep bystanders clear of the blade when it is being raised, lowered or angled. Do not stand between the vehicle and the blade or within 8 feet of a moving blade. A moving or falling blade could cause personal injury.

### WARNING

Keep hands and feet clear of the blade and A-frame when mounting or removing the snowplow. Moving or falling assemblies could cause personal injury.

### WARNING

Do not exceed GVWR or GAWR including blade and ballast. The rating label is found on driver-side vehicle door cornerpost.

### WARNING

To prevent accidental movement of the blade, always turn the control OFF whenever the snowplow is not in use. The power indicator light will turn OFF.

### WARNING

Remove blade assembly before placing vehicle on hoist.

### CAUTION

Assembling a hose to the incorrect wing ram port can result in permanent damage to the ram.

### CAUTION

Refer to the current Quick Match selection system for minimum vehicle recommendations and ballast requirements.

## HYDRAULIC SAFETY

### WARNING

Hydraulic fluid under pressure can cause skin injection injury. If you are injured by hydraulic fluid, get medical attention immediately.

- Always inspect hydraulic components and hoses before using. Replace any damaged or worn parts immediately.
- If you suspect a hose leak, DO NOT use your hand to locate it. Use a piece of cardboard or wood.

## FUSES

The WESTERN® electrical and hydraulic systems contain several blade-style automotive fuses. If a problem should occur and fuse replacement is necessary, the replacement fuse must be of the same type and amperage rating as the original. Installing a fuse with a higher rating can damage the system and could start a fire. Fuse Replacement, including fuse ratings and locations, is located in the Maintenance section of the Owner's Manual.

## PERSONAL SAFETY

- Remove ignition key and put the vehicle in park or in gear to prevent others from starting the vehicle during installation or service.
- Wear only snug-fitting clothing while working on your vehicle or snowplow.
- Do not wear jewelry or a necktie, and secure long hair.
- Wear safety goggles to protect your eyes from battery acid, gasoline, dirt and dust.
- Avoid touching hot surfaces such as the engine, radiator, hoses and exhaust pipes.
- Always have a fire extinguisher rated BC handy, for flammable liquids and electrical fires.

# SAFETY

## FIRE AND EXPLOSION

### WARNING

Gasoline is highly flammable and gasoline vapor is explosive. Never smoke while working on vehicle. Keep all open flames away from gasoline tank and lines. Wipe up any spilled gasoline immediately.

Be careful when using gasoline. Do not use gasoline to clean parts. Store only in approved containers away from sources of heat or flame.

## CELL PHONES

A driver's first responsibility is the safe operation of the vehicle. The most important thing you can do to prevent a crash is to avoid distractions and pay attention to the road. Wait until it is safe to operate Mobile Communication Equipment such as cell phones, text messaging devices, pagers or two-way radios.

## VENTILATION

### WARNING

Vehicle exhaust contains lethal fumes. Breathing these fumes, even in low concentrations, can cause death. Never operate a vehicle in an enclosed area without venting exhaust to the outside.

## BATTERY SAFETY

### CAUTION

Batteries normally produce explosive gases, which can cause personal injury. Therefore, do not allow flames, sparks or lit tobacco to come near the battery. When charging or working near a battery, always cover your face and protect your eyes, and also provide ventilation.

- Batteries contain sulfuric acid, which burns skin, eyes and clothing.
- Disconnect the battery before removing or replacing any electrical components.

## NOISE

Airborne noise emission during use is below 70 dB(A) for the snowplow operator.

## VIBRATION

Operating snowplow vibration does not exceed 2.5 m/s<sup>2</sup> to the hand-arm or 0.5 m/s<sup>2</sup> to the whole body.





## TORQUE CHART

### CAUTION





Read instructions before assembling. Fasteners should be finger tight until instructed to tighten according to torque chart. Use standard methods and practices when attaching snowplow including proper personal protective safety equipment.

### Recommended Fastener Torque Chart

#### Inch Fasteners Grade 5 and Grade 8

Size	Torque (ft-lb)		Size	Torque (ft-lb)	
	 Grade 5	 Grade 8		 Grade 5	 Grade 8
1/4-20	8.4	11.9	9/16-12	109	154
1/4-28	9.7	13.7	9/16-18	121	171
5/16-18	17.4	24.6	5/8-11	150	212
5/16-24	19.2	27.3	5/8-18	170	240
3/8-16	30.8	43.6	3/4-10	269	376
3/8-24	35.0	49.4	3/4-16	297	420
7/16-14	49.4	69.8	7/8-9	429	606
7/16-20	55.2	77.9	7/8-14	474	669
1/2-13	75.3	106.4	1-8	644	909
1/2-20	85.0	120.0	1-12	704	995

#### Metric Fasteners Class 8.8 and 10.9

Size	Torque (ft-lb)		Size	Torque (ft-lb)	
	 Class 8.8	 Class 10.9		 Class 8.8	 Class 10.9
M6 x 1.00	7.7	11.1	M20 x 2.50	325	450
M8 x 1.25	19.5	26.9	M22 x 2.50	428	613
M10 x 1.50	38.5	53.3	M24 x 3.00	562	778
M12 x 1.75	67	93	M27 x 3.00	796	1139
M14 x 2.00	107	148	M30 x 3.50	1117	1545
M16 x 2.00	167	231	M33 x 3.50	1468	2101
M18 x 2.50	222	318	M36 x 4.00	1952	2701

These torque values apply to fasteners except those noted in the instructions.

# INSTALLATION INSTRUCTIONS

## LIFT FRAME TO A-FRAME


1. Set aside the blade guides and parts bags. The vehicle electrical harnesses and Owner's Manual packet are in the bag with the headlamp box.
2. Remove the packaging hardware securing the lift frame to the A-frame, except for the clevis pins and the shipping brackets.
3. Remove the fasteners and blocking securing the A-frame to the pallet.
4. While supporting the lift frame, remove the clevis pins and discard the shipping brackets.

## Pivot Plate Configuration

**IMPORTANT!** Before assembling the pivot plates to the ends of the pivot bar, pivot plate orientation and pivot hole position must be determined using the following procedure.

Before measuring the vehicle mount height, the vehicle mount and receiver brackets must be installed, ballast must be installed if required, and the vehicle must be parked on a level surface.

1. Measure the distance "d" from the ground to the top edge of the receiver bracket. Measure both sides and determine the average value "d".

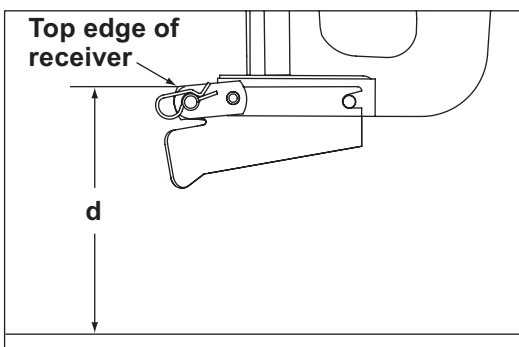


2. If the vehicle is unavailable, use configuration 2 and reposition the plates later, as necessary.

3. Use dimension "d" from Step 1 and the following chart to determine the proper pivot plate mounting position and pivot hole selection.

Pivot Plate Configuration Chart		
Dimension "d"	Configuration	Stacking Stop
13.0" – 14.5"	1	No
14.5" – 16.0"	2	No
16.0" – 17.5"	3	Yes
17.5" – 19.0"	4	Yes

4. The two pivot plates, A and B, are mirror images of each other. They may be turned over and switched from one side of the pivot bar to the other to provide two different mounting positions.

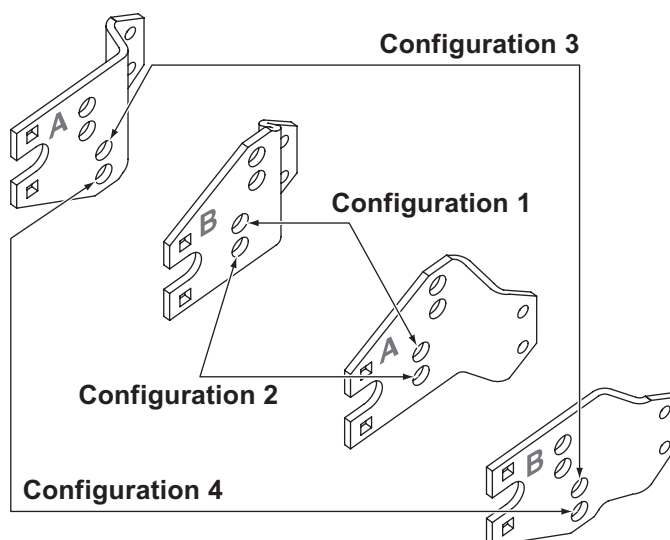

In each pivot plate mounting position, the pivot bar pins may be installed through either of the **lower** holes in the pivot plates, providing four different height adjustment positions. **The pivot bar pins are never installed in either of the two upper holes in the pivot plates.**

# INSTALLATION INSTRUCTIONS

## Pivot Plates to Lift Frame


### Configuration 1 or 2

The snowplow is pre-assembled for configuration 1 or 2. If the lift frame to A-frame assembly needs to be in either of these configurations, the pivot plates do not need to be repositioned. Skip to Step 6.


### Configuration 3 or 4

If the lift frame to A-frame assembly needs to be in configuration 3 or 4, the pivot plates must be removed and repositioned before the A-frame is assembled to the lift frame.

1. With the lift frame supported, remove and retain the two 5/8" x 2" carriage bolts and locknuts near the thrust tube on both sides.
2. Rotate the stand downward and out of the way until the clearance hole is visible. Remove the 5/8" x 1-1/2" cap screw through the clearance hole. Retain the cap screw and locknut. Repeat on the other side.

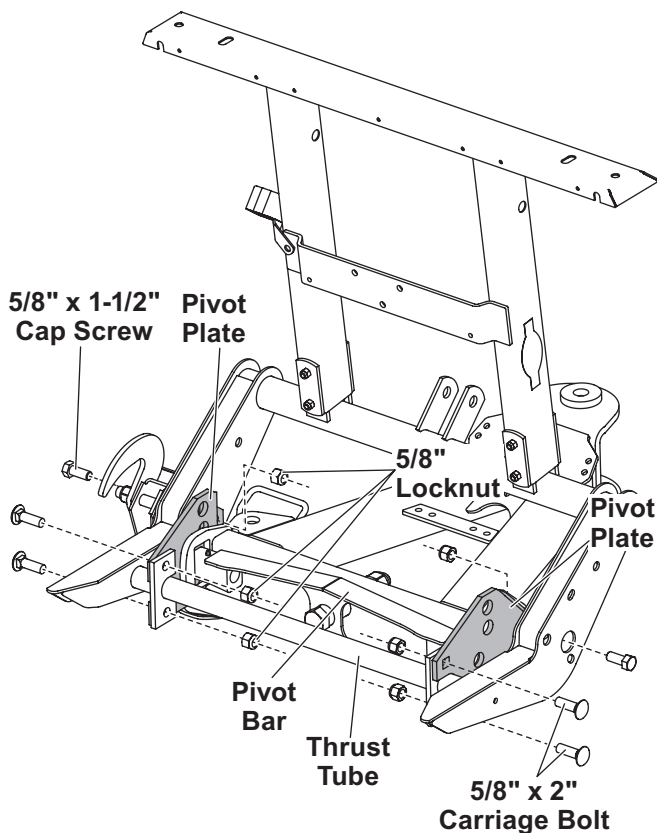


3. Reposition the pivot plates by turning them over and switching them from one side of the lift frame to the other.
4. Secure the pivot plates to the lower lift frame using the fasteners removed in Step 1.
5. Install the stacking stop, securing it with two 3/8" x 1" cap screws and 3/8" locknuts. Tighten all fasteners according to the torque chart.

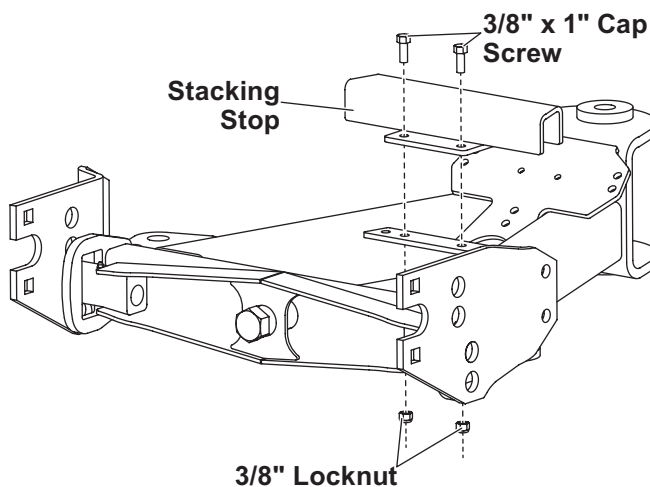

## Pivot Plates to Pivot Bar

6. Position the A-frame and pivot bar between the pivot plates, aligning the hole at each end of the pivot bar with the appropriate hole in the pivot plate.
7. Insert 1" x 4-3/4" clevis pins from the inside of the pivot bar through the correct pivot plate holes for the configuration. Secure the pins with 1" washers and cotter pins.

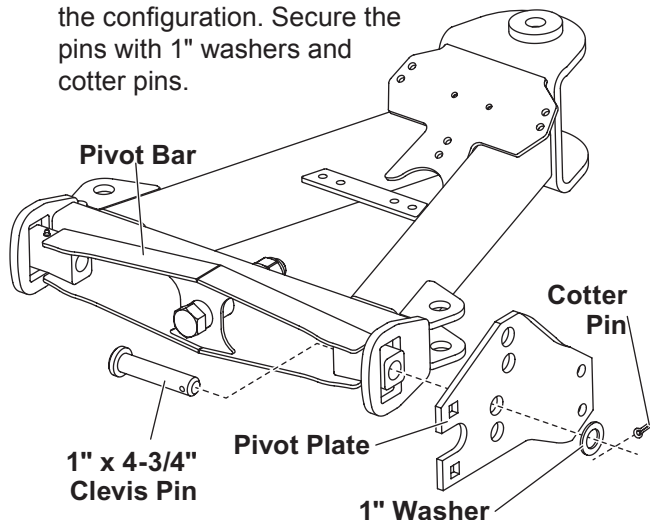

# INSTALLATION INSTRUCTIONS

## STAND SHOE


### **⚠ WARNING**

The stand plunger spring is shipped compressed and tied. Do not cut the spring tie until final stand shoe adjustment is complete and the roll pin is installed.

The initial stand shoe height adjustment is based on the pivot plate configuration chart. A final adjustment of the stand shoe will be made after attaching the snowplow to the vehicle.

1. Slide the stand shoe into the stand tube and align the 1/4" hole in the stand tube with the 1/4" hole in the stand shoe (determined from the pivot plate configuration chart and illustration below).

Pivot Plate Configuration Chart		
Dimension "d"	Configuration	Stacking Stop
13.0" – 14.5"	1	No
14.5" – 16.0"	2	No
16.0" – 17.5"	3	Yes
17.5" – 19.0"	4	Yes

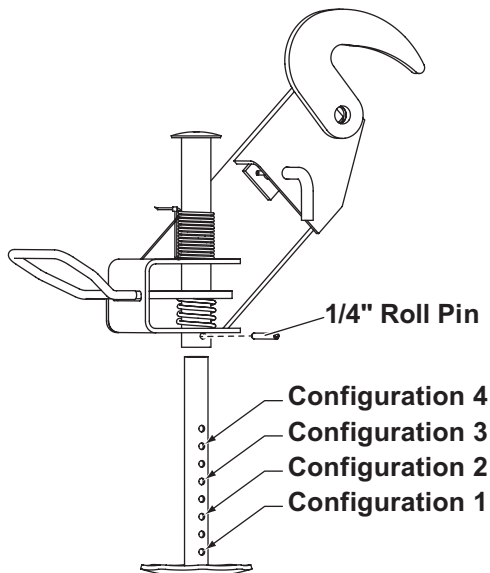

2. Insert the 1/4" roll pin.
3. Do not cut the spring tie until after final stand shoe adjustment.





# INSTALLATION INSTRUCTIONS

## A-FRAME TO BLADE ASSEMBLY

1. Align the pivot bolt hole on the A-frame with the pivot bolt hole on the quadrant.
2. Install the pivot bolt from the top. Secure with a 1" locknut and tighten the locknut as much as possible while allowing the A-frame and quadrant to pivot.
3. Move the snowplow into a normal operating position.
4. Remove the protective packaging from the angle rams.
5. Align the holes in the rod end of the angle ram with the corresponding holes on the back of the quadrant.
6. Install a 1" x 3-5/16" clevis pin from the top down to attach each rod. Secure the clevis pins with 1/4" x 1-1/2" cotter pins.

7. Install the blade guides.

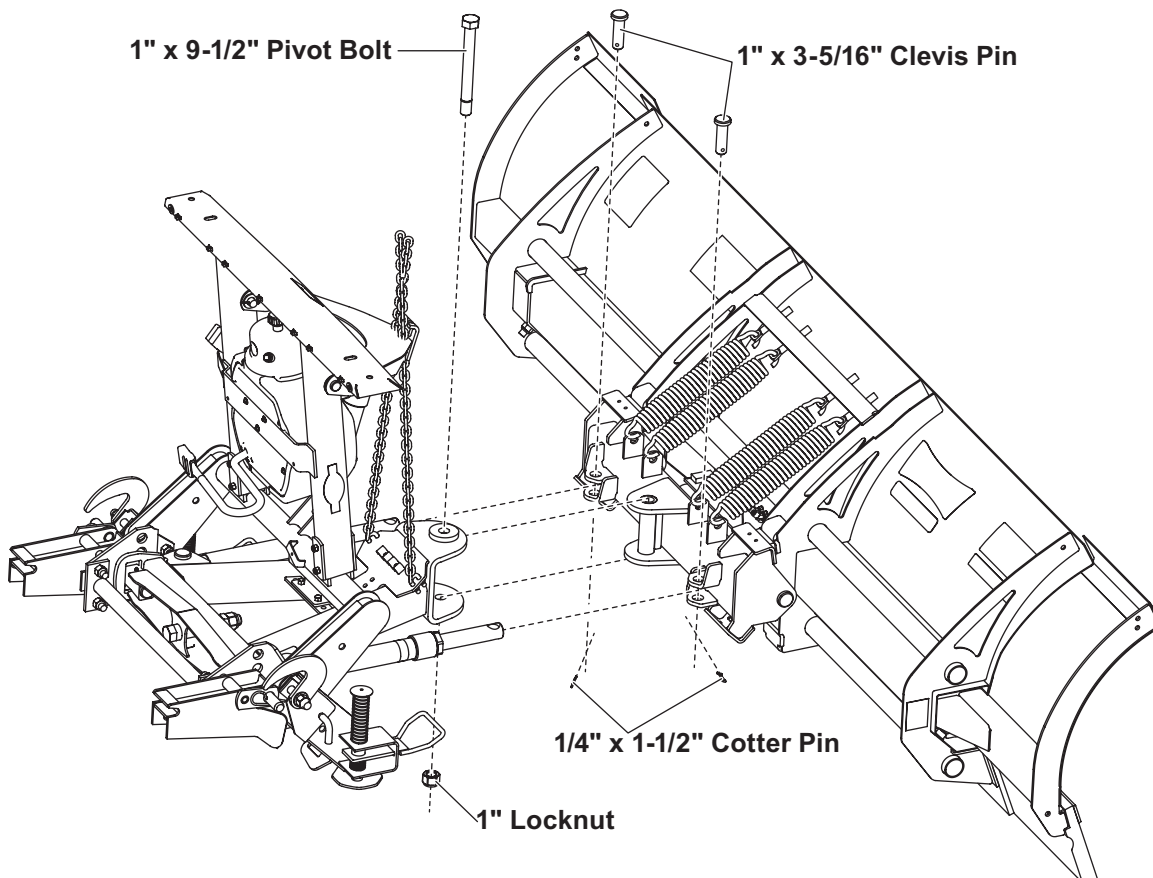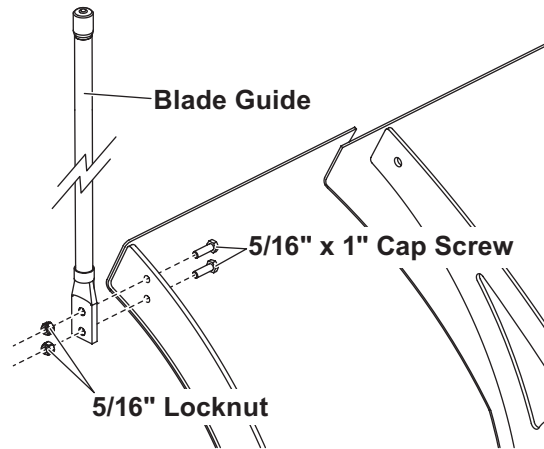

# INSTALLATION INSTRUCTIONS

## HYDRAULIC HOSE CONFIGURATION

### Hose Routing


#### Configuration 1 or 2

The snowplow is pre-assembled for configuration 1 or 2. If either of these configurations have been selected, skip to the next section.


#### Configuration 3 or 4

If the lift frame and A-frame assembly have been assembled for configuration 3 or 4, the hydraulic hoses will need to be re-routed to the front of the A-frame.


1. Remove the front protective hose wrap and set aside.

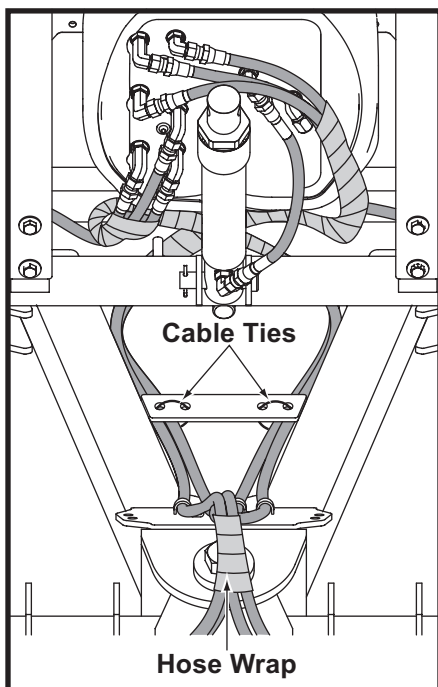


2. Loosen the socket cap screws and remove the hoses from the hose clamps.

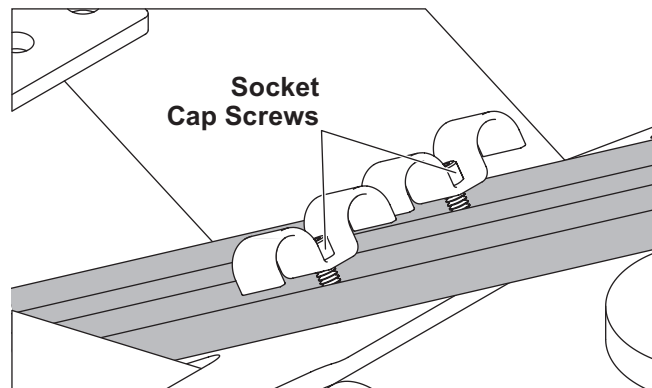

3. Remove the cable ties securing the hoses to the A-frame.
4. Reposition the hoses as shown.

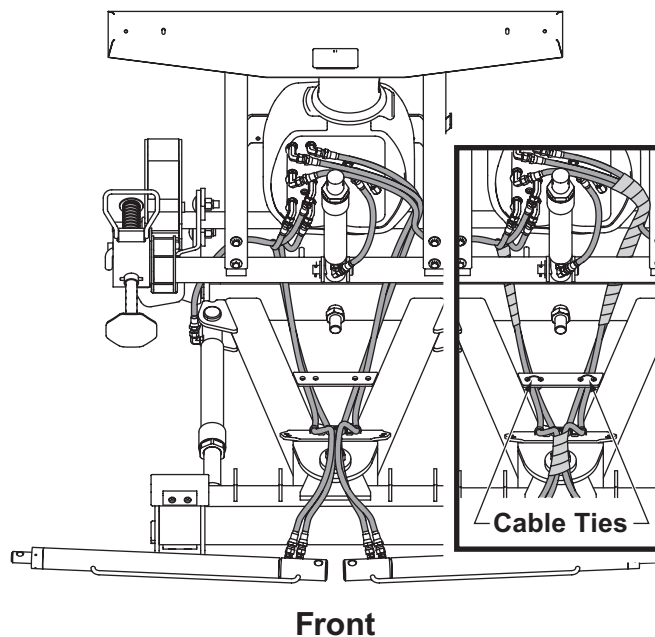


# INSTALLATION INSTRUCTIONS

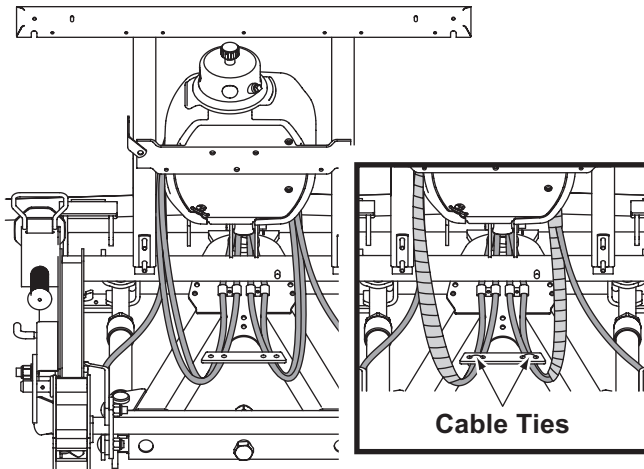

**Rear**

5. Re-assemble the hoses in the clamps. Hoses should extend approximately 24" beyond the hose clamps. Leave the hose clamps loose until assembly is complete.
6. Secure the hoses to the A-frame cross member with cable ties.

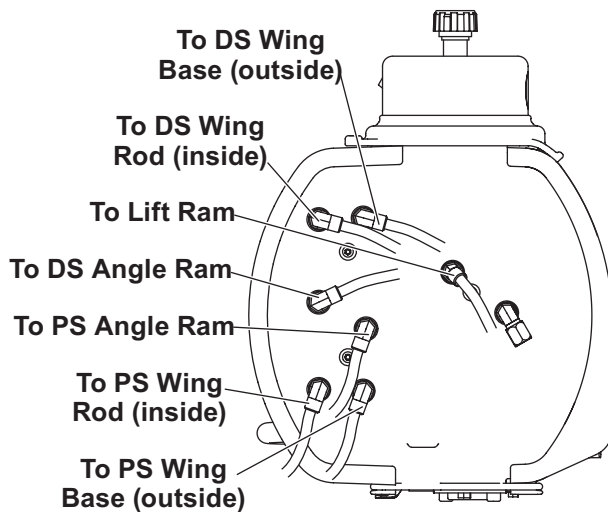


## Hydraulic Hoses to Wing Rams

### **⚠ CAUTION**

Assembling a hose to the incorrect wing ram port can result in permanent damage to the ram.

Do not use thread sealant/tape on hoses and fittings. This could damage the product.


1. Attach hoses labeled A, B, C and D to the corresponding labeled fittings on the wing rams.

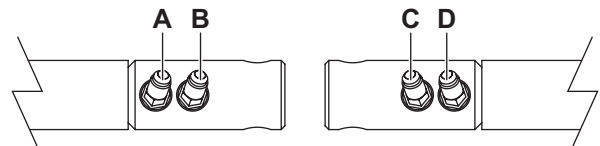

**DS Wing Ram**

**PS Wing Ram**

2. Using pliers to hold the hose end in position, tighten all hose fittings 1/8–1/4 turn past finger tight.
3. If it has been removed, replace the front hose wrap, maintaining the service loop as shown.

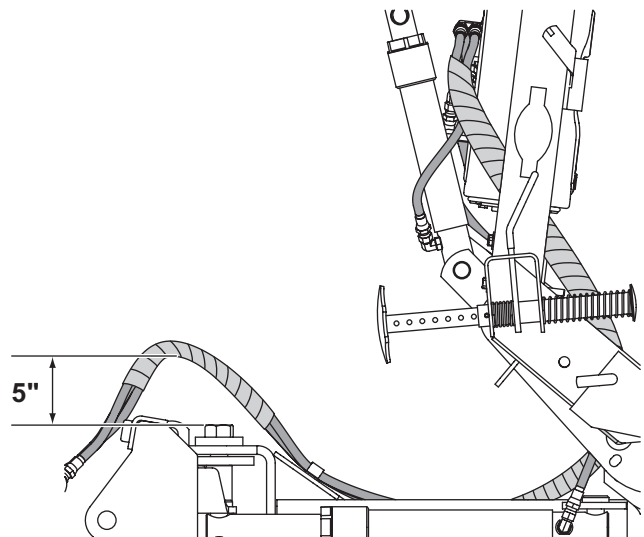

**NOTE: Service loop must be at least 5" above blade pivot bolt to allow for tripping of the blade.**

4. Tighten the hose clamps.


# INSTALLATION INSTRUCTIONS

## HEADLAMPS


### **⚠ WARNING**

**Your vehicle must be equipped with snowplow headlamps and directional lights.**

Headlamps, hardware and instructions are found in the headlamp box. Additional hardware (two 1-7/8" flat washers) can be found in the parts bag.

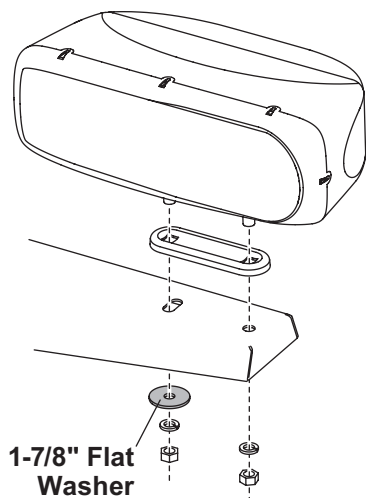

1. Attach the headlamps to the headlamp channel according to the instructions provided in the headlamps box, substituting the 1-7/8" flat washer from the parts bag for the 1/2" flat washer packed in the headlamps box.

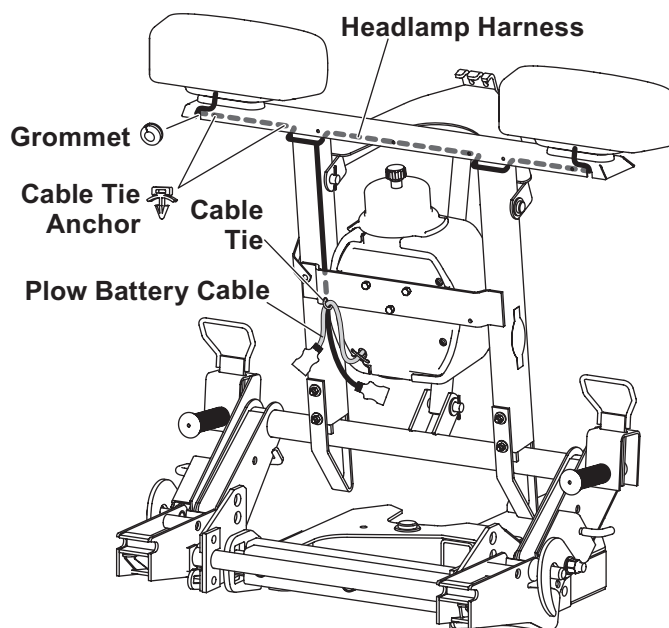

Refer to the figure above for the following instructions.

2. Insert seven cable tie anchors into the 1/4" holes on the rear of the headlamp channel, from inside the channel, with the locking tabs horizontal.
3. Install a split rubber grommet on each headlamp wire 3" from the headlamp and insert the grommet and wire into the slot on the rear of the channel.
4. Route the wires underneath the channel, in back of the vertical supports, and down along the inside of the driver-side vertical support, securing the wires to the anchors with cable ties.
5. Attach the harness to the front of the hydraulic unit cross member at the driver-side vertical support with a cable tie through the hole in the cross member.
6. Cable tie the harnesses and battery cable to the lift frame as shown in illustration.

## OPERATIONAL TEST AND FINAL ADJUSTMENTS


### HYDRAULIC UNIT

#### ⚠ WARNING

Keep 8' clear of the blade when it is being raised, lowered or angled. Do not stand between the vehicle and blade or directly in front of the blade. If the blade hits or drops on you, you could be seriously injured.

The WIDE-OUT™ hydraulic system comes from the factory pre-assembled, partially filled and fully tested.

1. Attach the snowplow to the vehicle according to the instructions on the back of the blade.
2. Remove and discard the factory-installed pipe plug from the top of the reservoir and install the breather.

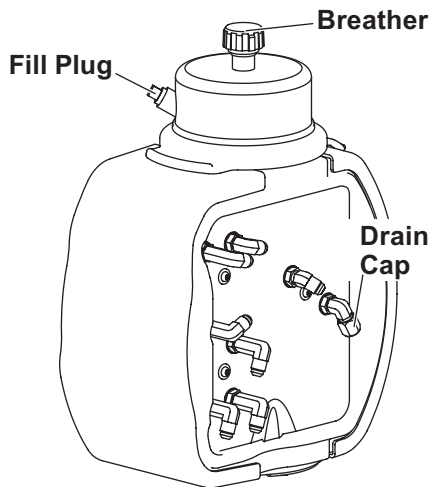

#### ⚠ WARNING

To prevent accidental movement of the blade, always turn the control OFF whenever the snowplow is not in use. The power indicator light will turn OFF.

3. Turn the control ON and completely extend and retract the driver-side wing several times. Repeat for the passenger-side wing. With both wings fully retracted, raise and lower the snowplow several times. Activate the control FLOAT function and manually collapse the lift ram all the way. Turn the control OFF.

#### ⚠ CAUTION

Do not mix different types of hydraulic fluid. Some fluids are not compatible and may cause performance problems and product damage.

4. Remove the fill plug and check the fluid level. With the snowplow wings and lift ram fully retracted, the fluid level should reach the fill hole. If additional fluid is needed, fill the reservoir with WESTERN® High Performance Hydraulic Fluid to -40°F (-40°C), or other fluid conforming to Military Specification MIL-H-5606 A, such as Mobil Aero HFA or Shell AeroShell® Fluid 4.

**NOTE:** Loosen fill plug slowly to relieve any pressure in the reservoir.

**NOTE:** Add fluid only when all rams are retracted.

5. Replace and tighten the fill plug.

#### FLUID CAPACITY

- FloStat® Unit Reservoir 1-3/4 quarts
- FloStat System Total 2-3/8 to 2-3/4 quarts


# OPERATIONAL TEST AND FINAL ADJUSTMENTS

## BLADE DROP SPEED ADJUSTMENT

### **⚠ WARNING**

Keep 8' clear of the blade when it is being raised, lowered or angled. Do not stand between the vehicle and blade or directly in front of the blade. If the blade hits or drops on you, you could be seriously injured.

The quill in the valve manifold adjusts the blade drop speed.

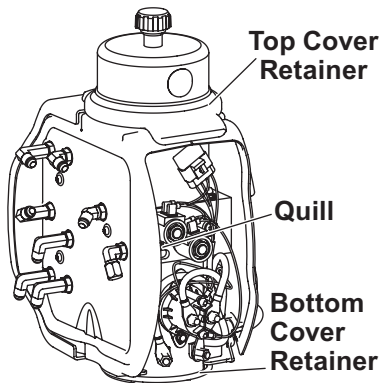

1. Lower the blade to the ground before making any adjustment.
2. On the hydraulic unit, raise the top cover retainer, remove the bottom cover retainer and remove the side cover.
3. Turn the quill IN (clockwise) to decrease drop speed. Turn the quill OUT (counterclockwise) to increase drop speed.
4. Stand 8' clear of the blade when checking adjustment.
5. Replace the cover and reinstall the O-ring and top cover seal.

## FINAL INSPECTION AND ADJUSTMENT

### **⚠ WARNING**

Keep 8' clear of the blade when it is being raised, lowered or angled. Do not stand between the vehicle and blade or directly in front of the blade. If the blade hits or drops on you, you could be seriously injured.

1. Attach the snowplow to the vehicle mount. With the snowplow lowered to the ground and on level pavement, measure the dimension from the ground to the center of the pivot bar cap screw. This dimension must be 9-3/4" to 11-1/4".
2. With the snowplow attached and on the ground, place the stand arm in the lower position with the lock pin engaged and with the stand shoe fully retracted in the "UP" position. Measure the distance from the ground to the bottom of the stand shoe. This distance should be 1-3/8" to 2-1/8". The stand can be adjusted to achieve this dimension by removing the roll pin and selecting the proper hole in the stand stem. When the stand height is correct, cut and remove the spring tie.
3. Final lift chain link adjustment must be made after the snowplow is assembled with the proper pivot plate position. On a level surface with the snowplow on the ground and the lift ram fully collapsed, attach the chains to the lift arm hooks in the tightest possible link. This adjustment will provide for optimum transport height, blade float and stacking stop clearance. When chain tension is correct, the A-frame will not contact the lift frame when the blade is fully raised.


## OPERATIONAL TEST AND FINAL ADJUSTMENTS

4. Check that the trip springs are adjusted correctly by confirming that the coils of the springs are separated slightly.

### **⚠ CAUTION**

**Overtightening springs will not increase blade trip force and can damage the springs.**

5. Adjust the trip springs by loosening the bottom nuts and then tightening the top nuts until the coils of the springs begin to separate (a piece of paper such as this instruction sheet should pass between the second and third coils). Tighten the bottom nut against the trip spring brackets to lock it in place.
6. Fully raise the blade and verify that it does not block the headlamp beams. If the blade blocks the headlamp beams, lower the blade to the ground, collapse the lift ram and lengthen each chain by one link. Repeat this process, lengthening the chains by one link each time, until the blade does not block the headlamp beams.
7. Fully angle the blade in both directions in raised and lowered positions. Adjust hose fittings, wraps and clamps so hoses do not contact vehicle bumper, have no sharp bends and are wrapped at contact points with the lift and A-frames and between the lift chains. Verify the service loop for blade tripping is at least 5" above the blade pivot bolt.

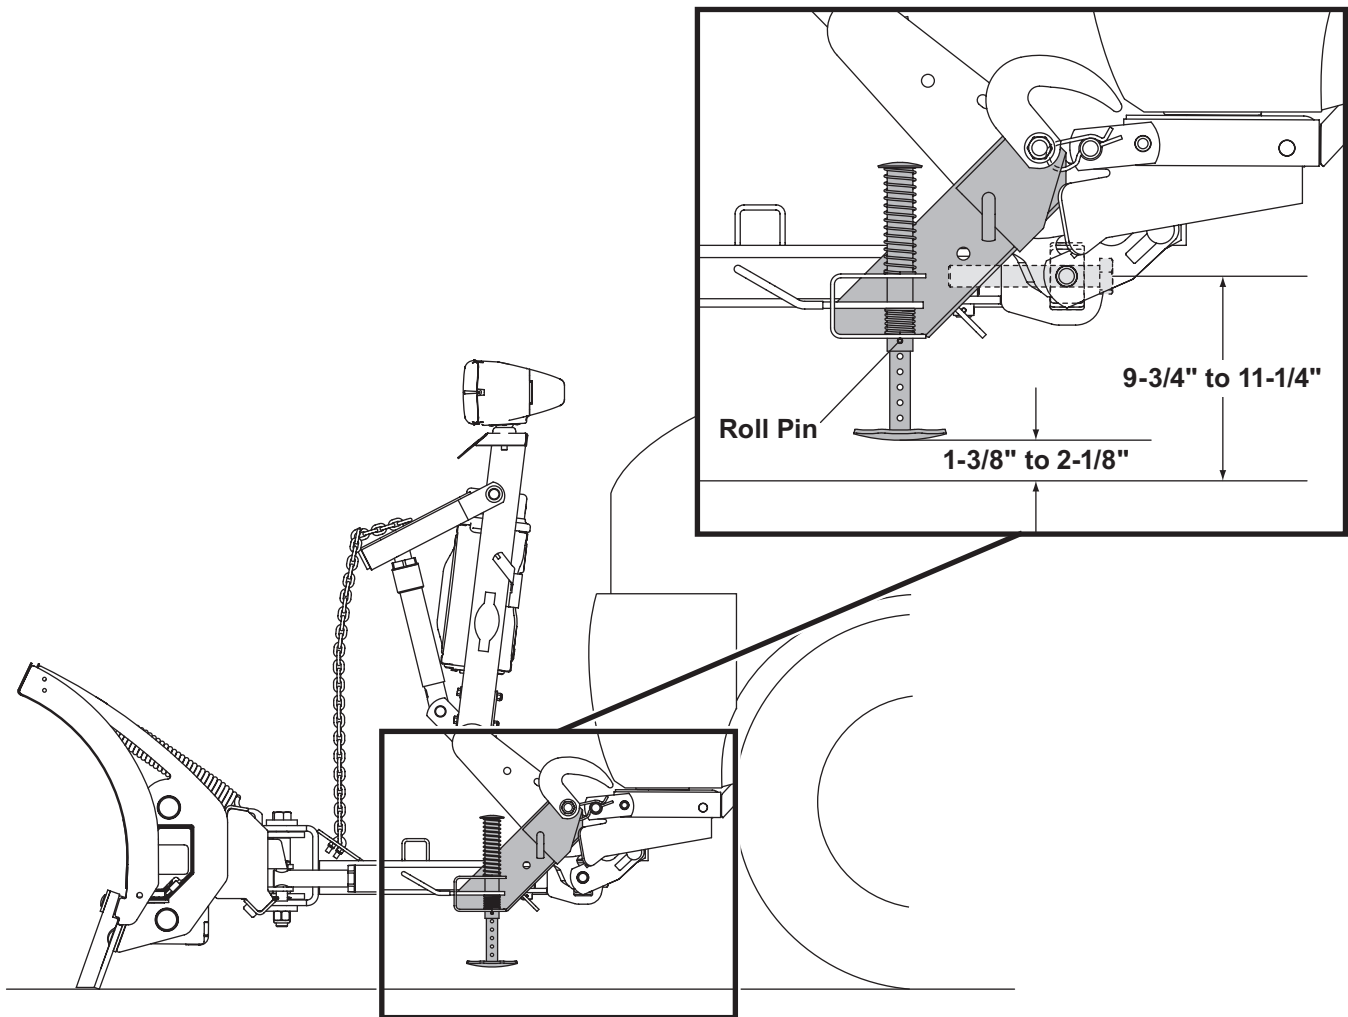



# OPERATIONAL TEST AND FINAL ADJUSTMENTS

## VEHICLE LIGHTING CHECK

1. Verify the operation of all vehicle front lighting prior to connecting the snowplow harness.
2. Check the operation of the snowplow lights with snowplow mounted to vehicle and all harnesses connected.

### Turn signals and parking lamps

Parking lamps ON:

- Both vehicle and snowplow parking lamps should be ON at the same time.

Driver-side turn signal ON:

- Both vehicle and snowplow driver-side turn signal lamps should flash at the same time.

Passenger-side turn signal ON:

- Both vehicle and snowplow passenger-side turn signal lamps should flash at the same time.

### Headlamps

Move vehicle headlamp switch to the "ON" position. Connecting and disconnecting the snowplow lighting harness plug should switch the lights between vehicle and snowplow as follows:

Snowplow lighting harness DISCONNECTED:

- Vehicle headlamps should be ON.
- Snowplow headlamps should be OFF.

Snowplow lighting harness CONNECTED:

- Snowplow headlamps should be ON.
- Vehicle headlamps should be OFF.

Dimmer switch should toggle headlamps between high and low beams. The high beam indicator on the dash should light when headlamps are placed in high beam.

### Daytime Running Lamps (DRLs)

An operational check of the vehicle and snowplow DRLs will depend on the vehicle model, vehicle DRL system and type of Isolation Module installed. Due to the variations in the OEM DRL systems and the different Isolation Module

options available, checking the functionality of the snowplow DRLs will depend on the type of module installed on the vehicle.

With headlamp switch OFF, activate the vehicle DRLs.

Snowplow lighting harness DISCONNECTED:

- Vehicle DRLs should be ON.
- Snowplow headlamps should be OFF.

Snowplow lighting harness CONNECTED and vehicle in DRL mode:

- Check snowplow DRL function per the type of Isolation Module installed.

Refer to the Mechanic's Guide for information on the Isolation Module DRL functions.

### Joystick or Hand-Held Control

The snowplow plugs **do** need to be connected to the vehicle harness connectors. The control power indicator light should light whenever the control ON/OFF switch and the ignition (key) switch are both in the "ON" position.

3. Connect all snowplow and vehicle harnesses. Raise the snowplow and aim snowplow headlamps according to the Snowplow Headlamp Beam Aiming instructions included with the headlamps and any state or local regulations.
4. Check aim of vehicle headlamps with snowplow removed.

### CAUTION

**On 2-plug electrical systems, plug covers shall be used whenever snowplow is disconnected. Vehicle Battery Cable is 12-volt unfused source.**

5. When the snowplow is removed from the vehicle, install plug covers on the vehicle battery cable and lighting harness. Insert the snowplow battery cable and lighting harness into the cable boot on the snowplow.



## OPERATIONAL TEST AND FINAL ADJUSTMENTS

---

### OWNER'S MANUAL PACKET

If the completed snowplow will be delivered immediately, the Owner's Manual should be reviewed with and given to the purchaser according to the snowplow checklist.

If the snowplow is completed prior to delivery to the purchaser, attach the Owner's Manual Packet to the electrical cable of the cab control for safekeeping.



Western Products  
PO Box 245038  
Milwaukee, WI 53224-9538  
[www.westernplows.com](http://www.westernplows.com)

 A DIVISION OF DOUGLAS DYNAMICS, LLC

Western Products reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. Western Products or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. Western Products offers a limited warranty for all snowplows and accessories. See separately printed page for this important information. The following are registered (®) or unregistered (™) trademarks of Douglas Dynamics, LLC: FloStat®, UltraMount®, WESTERN®, WIDE-OUT™.

**Printed in U.S.A.**